

Assembly Instructions

Model:	EN650A/B
Description:	Passenger Footrest
Part Number:	99994-0570

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : NOTE indicates information that may help or guide you in the operation or service of the vehicle.


- Indicates a procedural step or work to be done.

Refer to the Service Manual (P/No.: 99924-1491-01) for detailed procedures.

NOTE

- This kit requires installation of the passenger seat kit (sold separately).


Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Left Rear Frame	31064-0650-□□□	1	□□□ is the color codes.
2	Right Rear Frame	31064-0651-□□□	1	□□□ is the color codes.
3	Pin	92043-1339	2	
4	Rear Footpeg	34028-0344	2	
5	Damper	92161-0232	2	
6	Washer	92200-1482	2	
7	Snap Ring	482EA7000	2	

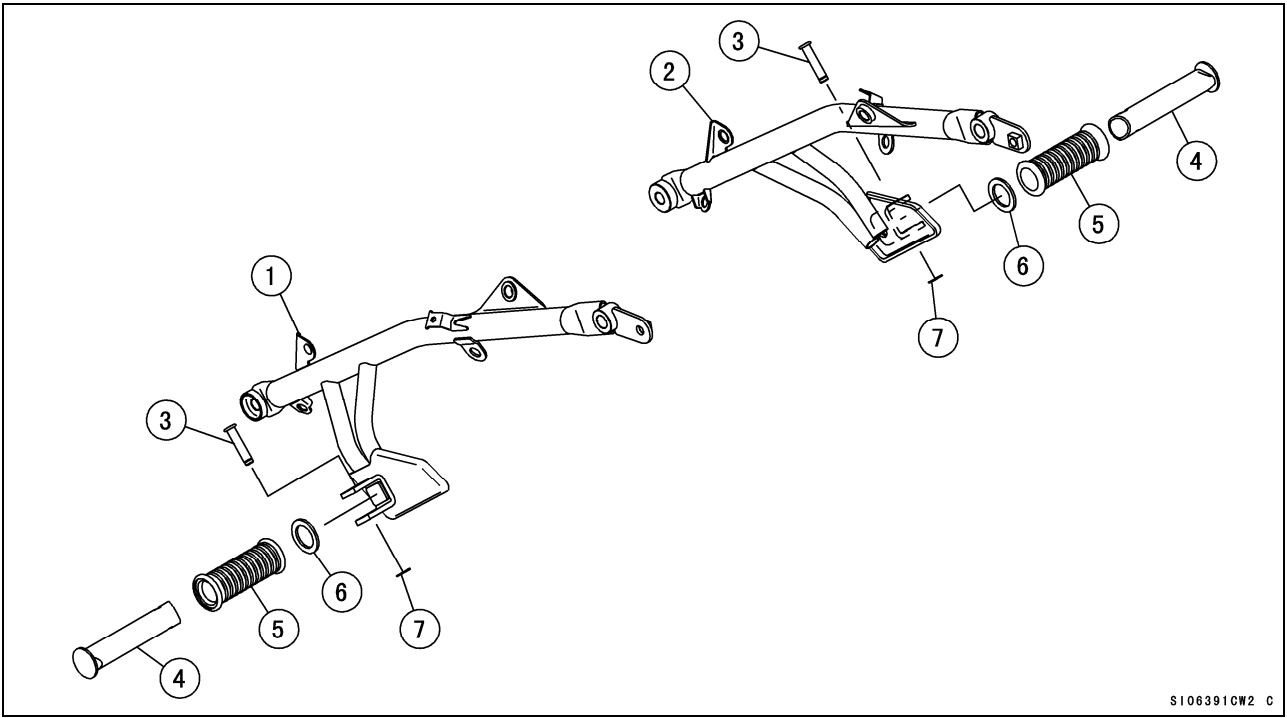


Installation Instructions

- Remove the rear frame (both side) (Refer to the Service Manual).


- Remove the following parts from the rear frames.
Dampers [A]
Grommet [B]

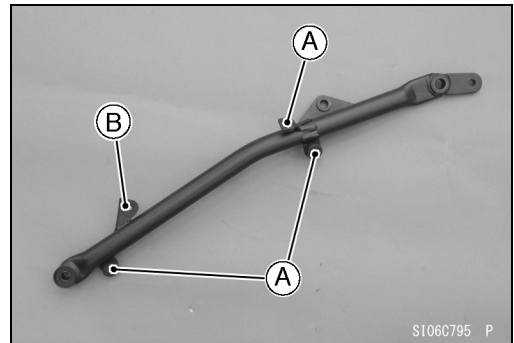


- Install the following removed parts to the frames [1] [2].
Dampers [A]
Grommet [B]

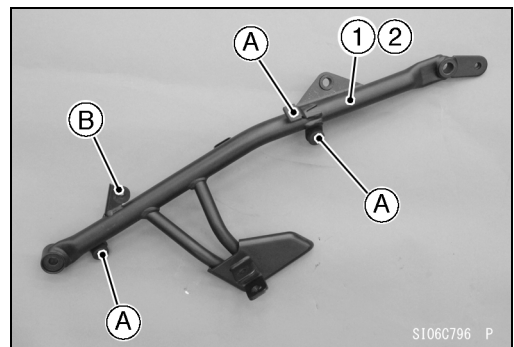

- Installation is the reverse of removal.
- Tighten:
Torque – Upper Rear Frame Bolt [A]: 34 N·m (3.5 kgf·m, 25 ft·lb)
Middle Rear Frame Bolt [B]: 25 N·m (2.5 kgf·m, 18 ft·lb)
Lower Rear Frame Bolt [C]: 34 N·m (3.5 kgf·m, 25 ft·lb)
- Tighten the bolt [D] securely (Refer to Service Manual).

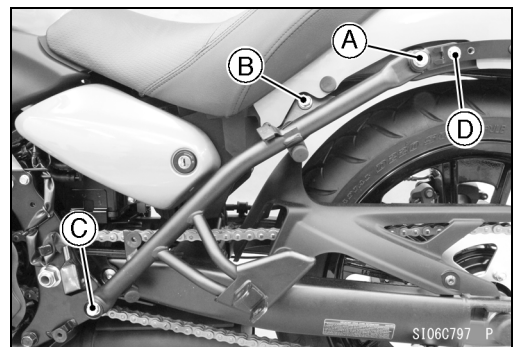

- Apply grease to the sliding areas of pin [3], footpeg [4] and rear frame.
- Install the footpeg [4] and damper [5] as shown.
- Install:
Washer [6]
Pin [3]
Snap Ring [7]

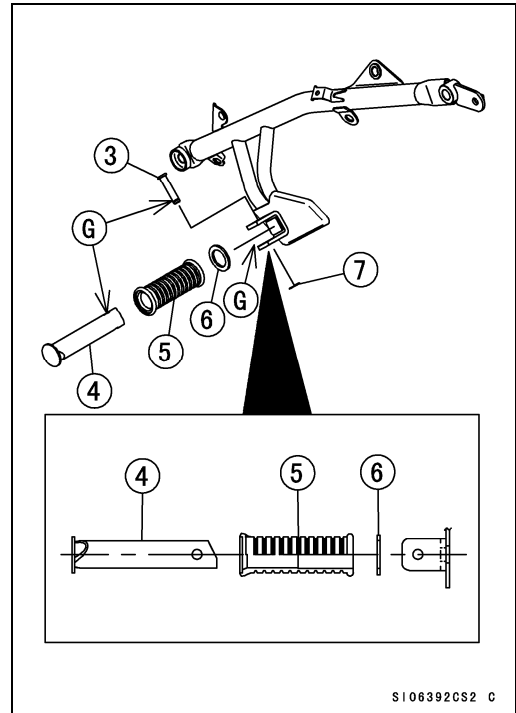

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 14
10	25 ~ 34	2.5 ~ 3.5	18 ~ 25
12	44 ~ 61	4.5 ~ 6.2	32 ~ 45
14	73 ~ 98	7.4 ~ 10	54 ~ 72
16	115 ~ 155	11.7 ~ 15.8	84.8 ~ 114
18	165 ~ 225	16.8 ~ 22.9	122 ~ 166
20	225 ~ 325	22.9 ~ 33.1	166 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.