

Assembly Instructions

Model:	KLZ1000C/D
Description:	Slider
Part Number:	99994-1139
Flat Rate Time(Hr):	0.4

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation. Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*


- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

Refer to the Service Manual for detailed procedures.
 (KLZ1000C) P/No.: 99924-1552-01 or 99967-0006-01
 (KLZ1000D) P/No.: 99924-1553-01 or 99967-0007-01

NOTE

- *When installing this kit and the fog lamp kit at the same time, the fog lamp kit install first.*


Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Pad	39156-1818	2	
2	Bracket	23062-1188	1	Left
3	Bracket	23062-1189	1	Right
4	Clamp	92173-1925	2	
5	Bolt	92154-0907	4	M6 × 14
6	Bolt	92153-0912	4	M8 × 20
7	Washer	410AB0800	4	
8	Damper	92161-1721	2	
9	Bolt	92154-1923	2	
10	Washer	92200-1785	2	

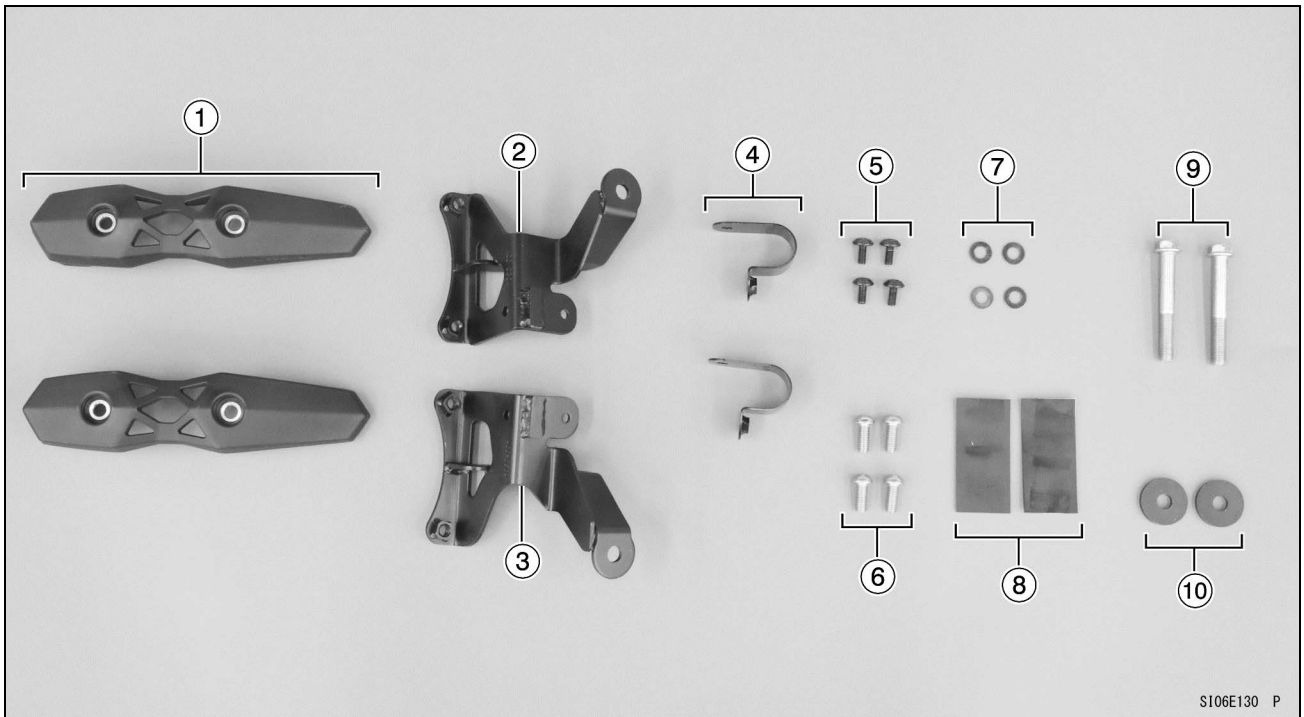

Installation Instructions

Left Side:


- Remove:
Bolts [A] and Collar [B] (Left Side Only)
- Pull the middle fairing to the outward lightly.

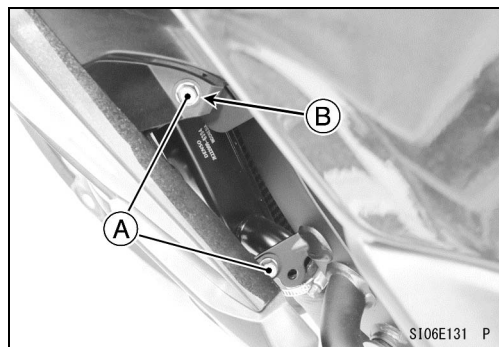

- Remove:
Lower Engine Bracket Bolt [A] and Washer [B]

NOTE


- *The removed bolt and washer are not necessary for this accessory.*

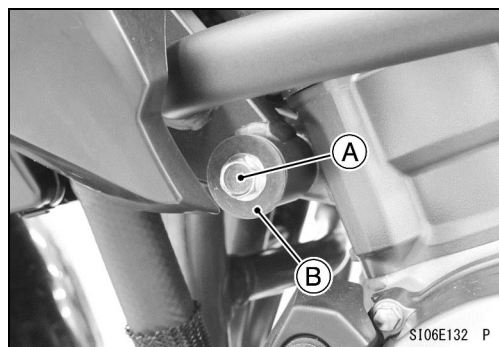


- Install the damper [8] so that the middle of damper aligns with the middle of the clamp [4] installing position.
- Align the edge [A] of the damper with the horizontal line of the engine bracket [B] as shown.

For Reference

- About 47 mm (1.9 in.) [C] (Left Side)
- About 56 mm (2.2 in.) (Right Side)

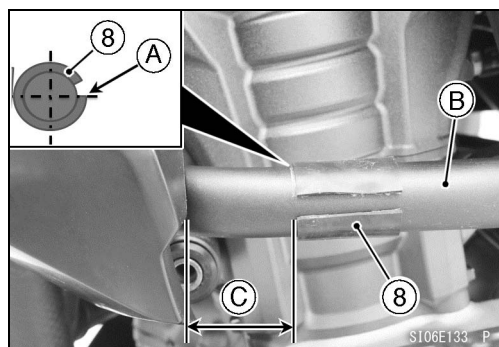


- Apply water to the damper [8].
- Install the clamp [4] on the damper as shown.
Engine [A]

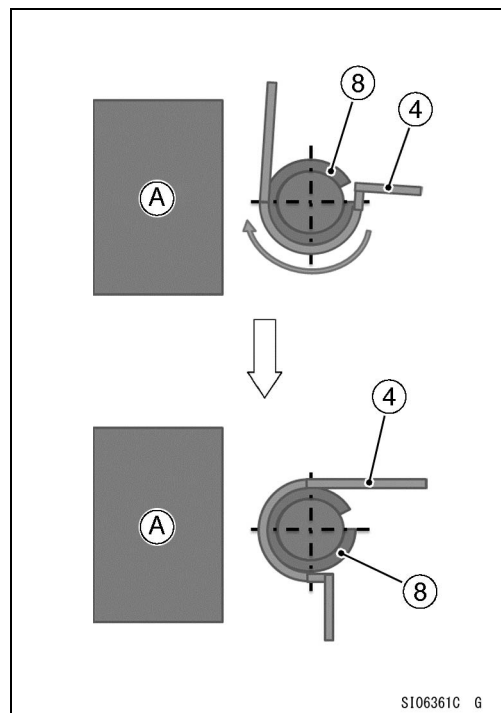


- Install:
Washer [10]
Bracket [2] (Left Side)
Bolt [9]

NOTE

- When the fog lamp kit installed, the washer [10] does not use in this kit.

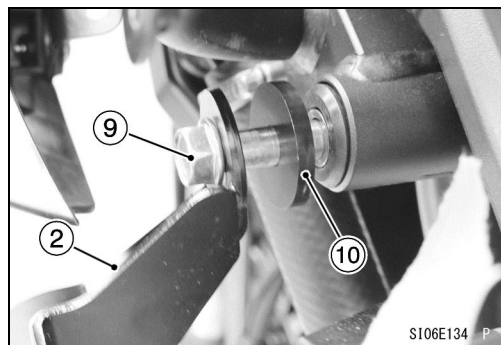


- Temporary tighten the bolt [9] and bolts[5].
- Tighten:
Torque – Lower Engine Bracket Bolt [9]: 45 N·m (4.6 kgf·m, 33 ft·lb)
Bracket Bolts [5]: 8.0 N·m (0.82 kgf·m, 71 in·lb)

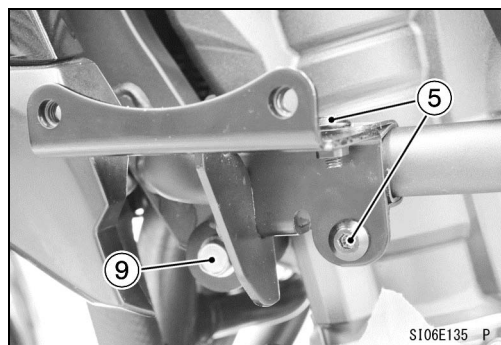

- Install the removed middle fairing bolts and collar(left side only), and tighten them.

- Install:
Pad [1]
Bolts [6] and Washers [7]
- Tighten:

Torque – Pad Mounting Bolts [6]: 20 N·m (2.0 kgf·m, 15 ft·lb)

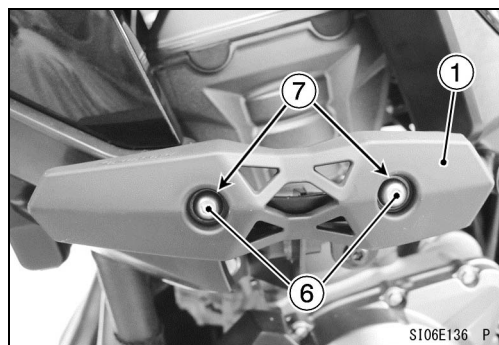

Right Side:

NOTE

- The right side shroud slider installation is the same as for left side.

Basic Torque for General Fasteners

The tables below, relating tightening torque to thread diameter, lists the basic torque for the bolts, nuts and screws. Use these tables for the bolts, nuts and screws which are not specified the tightening torque particularly on the previous pages. All of the values are for use with dry solvent-cleaned threads.

For Bolts and Nuts

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	4.5	0.46	40 in·lb
6	8.0	0.82	71 in·lb
8	20	2.0	15
10	35	3.6	26
12	60	6.1	44

For Screws, Plastic Part Tightening Portions and Plastic Washer Tightening Portions

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
4	1.2	0.12	11 in·lb
5	3.0	0.31	27 in·lb
6	4.0	0.41	35 in·lb

For Self-Tapping Screws

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
All	1.2	0.12	11 in·lb

For Wellnuts

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
4	0.2	0.02	1.8 in·lb
5	0.5	0.05	4.4 in·lb
6	1.0	0.10	8.9 in·lb

Check tightness of all fasteners in regular interval. Retighten loose fasteners.