



● Thank you for purchasing our product. This product is a multifunction meter and is easy to install. Before using, please read the instructions carefully and retain them for future reference.

⚠ Attention!


- For installation, please follow the steps described. Any damage caused by wrong installation shall be imputed to the users.
- To avoid a short circuit from occurring do not pull or modify the wires during installation.
- Do not disassemble or change any parts. Opening and disassembling this unit will void any warranty.
- Maintenance and repairs should be executed by our professionals only.

© Symbol description:

NOTE


⚠ Some procedures must be followed to avoid damages to the instrument.

⚠ **WARNING!** Certain procedure must be followed to avoid damages to yourself, to the vehicle or others.

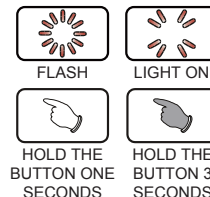

1-1 Accessories

1 LCD Meter X1

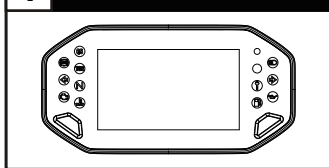

NOTE Contact your local distributor, if the items received in the box are not the same as the items listed above.

2-1 Installation instructions

Figure 1

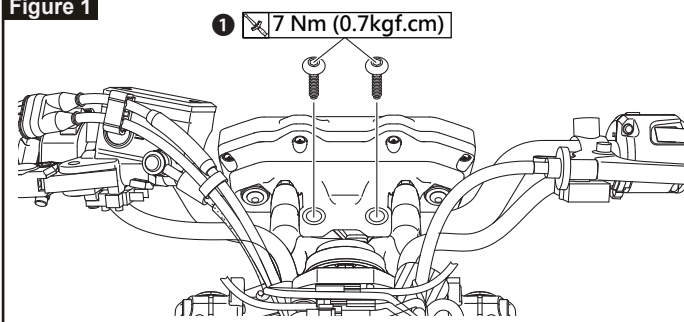


Figure 2


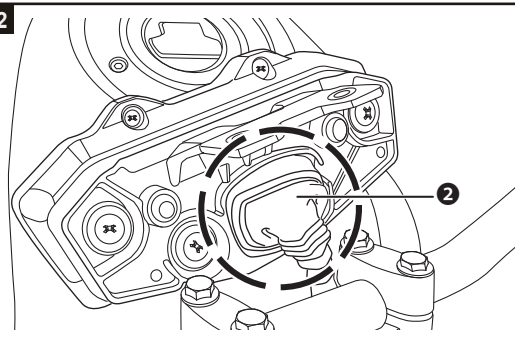


Figure 3

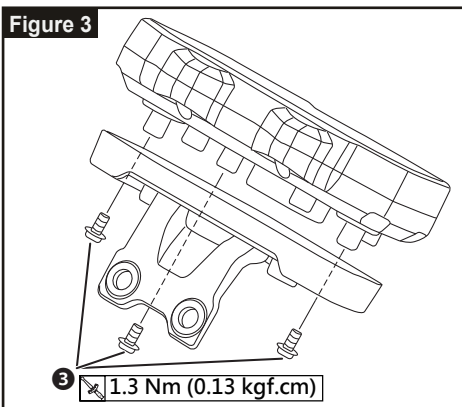


Follow the steps below during installation.

- 1 M6 Head Hexagon Socket Screw X2 7 Nm (0.7 kgf.cm)
- 2 The original main wiring
- 3 M5 Head Hexagon Socket Screw X3 1.3 Nm (0.13 kgf.cm)


NOTE Please refer to the sequence of the graph for the removal.
Please perform the assembly in a sequence reverse to the removal.

2-2 Wiring Installation Instructions

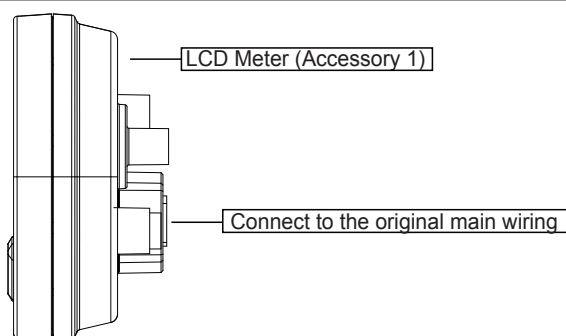

3-1 Corresponding No. of the Vehicle

Model	Meter part No.	Model	Meter part No.	Model	Meter part No.	Model	Meter part No.
MT-07	1WS-83500-00	MT-09	1RC-83500-00	XSR700	B2G-83500-00	XSR900	B90-83500-00
	1WS-83500-10		1RC-83500-10		B2G-83500-10		B90-83500-10
	2RC-83500-00		1RC-83500-20		B2G-83500-20		B90-83500-20
	2RC-83500-10		1RC-83500-30		B2G-83500-30		B90-83500-30
	2RC-83500-20		1RC-83500-40		B34-83500-00		B90-83500-40
	2RC-83500-30		1RC-83500-50		B34-83500-10		B90-83500-50
	1XB-83500-00		2DR-83500-00		B90-83500-60		
	1XB-83500-10		2DR-83500-10		B90-83500-70		
	BC6-83500-00			BS2-83500-00			
BC6-83500-10		BS2-83500-10					
		BS2-83500-20					
		BS2-83500-30					

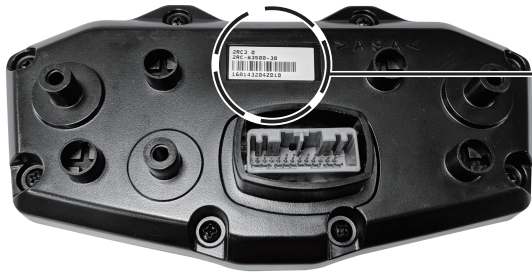


According to the table above, the vehicle type is "MT-07," and the meter part No. is "2RC-83500-30."



NOTE The "meter part No." may be found on the label attached to the back of the original meter or the original part manual.

3-2 Meter Size

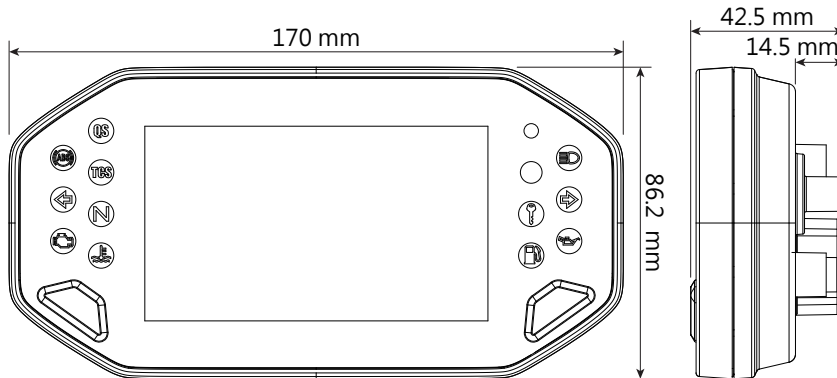

3-3 Basic Function Instruction

Tachometer

- Display range :
MT-07 : 0 ~ 12,000 RPM
MT-09 : 0 ~ 13,000 RPM
XSR700 : 0 ~ 12,000 RPM
XSR900 : 0 ~ 13,000 RPM

Clock

- Display range :
00:00 ~ 23:59 (24H),
1:00 ~ 12:59 (12H)

ECO Indicator

- Display range : display, No display

Phone battery

- Display range : 3 bars.

Bluetooth connection status

- Display unit :
Steady (connected),
OFF (Unconnected)

Fuel meter

- Display range : 6 levels

Fuel warning

- Display unit : 1 level (16.6 %)
- Display range : The warning value for low fuel shall be 1 grid and below, the warning signal would blink as a warning.

Indicator

- ABS light (Amber)
- Left indication light (Green)
- Engine light (Amber)
- QS Quick switch signal (Green)
- TCS Tracking control signal (Amber)
- Neutral light (Green)
- Coolant temperature warning light (Red)
- RPM shift light (Red)
- IMMO anti-theft light (Red)
- Low fuel warning light (Amber)
- High beam light (Blue)
- Right indication light (Green)
- Motor oil light (Red)

Gear Meter

- Display range :
- , N , 1 ~ 6

Speedometer

- Display range :
0 ~ 360 km/h (0 ~ 225 MPH)
- Display unit :
1 km/h (MPH) Switchable

TCS display

- Display range : 1, 2, OFF

Driving mode

- Display range : STD, A, B

Voltmeter

- Display range : DC 8.0 ~ 18.0 V
- Display unit : DC 0.1 V

Time Trip

- Display range : 0 ~ 999.9 hr
- Display unit : 0.1 hr

Time 1, 2

- Display range : 0 ~ 999.9 hr
- Display unit : 0.1 hr

Coolant temperature warning

- Display range : 0 ~ 250 °C (32 ~ 482 °F)
- Display unit : 1 °C (°F)

Current fuel consumption

- Display range : 0 ~ 40.0 km/L, 2.5 ~ 99.9 L/100km, 0 ~ 99.9 MPG(US), 0 ~ 99.9 MPG(UK)
- Display unit : 0.1 km/L, 0.1 L/100km, 0.1 MPG(US), 0.1 MPG(UK)

Average fuel consumption

- Display range : 0 ~ 40.0 km/L, 2.5 ~ 99.9 L/100km, 0 ~ 99.9 MPG(US), 0 ~ 99.9 MPG(UK)
- Setting unit : 0.1 km/L, 0.1 L/100km, 0.1 MPG(US), 0.1 MPG(UK)

Trip meter 1, 2

- Display range : 0.0 ~ 9,999.9 km (mile), may return to zero manually
- Setting unit : 0.1 km (mile)

3-4 Specifications


●Speedometer	Display range : 0 ~ 360 km/h (0 ~ 225 MPH) Display unit : 1 km/h (MPH) Switchable	●Voltmeter	Display range : DC 8.0 ~ 18.0 V Display unit : DC 0.1 V
●Odometer	Display range : 0 ~ 999,999 km (mile) and then return to zero Display unit : 1 km (mile)	○Low voltage warning	Setting range : DC 8.0~13.0 V · LO means the setting value and below; the numerals would turn into red color and blink as a warning. Setting unit : DC 0.1 V
●Trip meter 1, 2	Display range : 0.0~9,999.9 km (mile) , may return to zero manually. Setting unit : 0.1 km (mile)	○High voltage warning	Setting range : DC 13.1~18.0 V · HI means the setting value reach or above; the numerals would turn into red color and blink as a warning. Setting unit : DC 0.1 V
●Low fuel mileage	Display range : 0 ~ 999 km (mile) Display unit : 1 km (mile)	●Target speed	Setting range : 0 ~ 360 km/h (0 ~ 225 MPH)
●Motor oil maintenance	Setting range : User settings(500 ~ 16,000 km/ 300 ~ 10,000 mile) ~ -999 km (mile) · Automatically decrease depending on the increase of the total mileage. Display unit : 1 km (mile) Warning range : Texts would turn into red color as a warning for 0 km (mile) and below.	●Target distance	Setting range : 50 ~ 1,500 m (1/32 ~ 30/32 mile)
○Maintenance mileage 1, 2	Setting range : User settings(500 ~ 16,000 km/ 300 ~ 10,000 mile) ~ -999 km (mile) · Automatically decrease depending on the increase of the total mileage. Display unit : 1 km (mile) Warning range : Texts would turn into red color as a warning for 0 km (mile) and below.	●Top speed	Display range Speed : 0 ~ 360 km/h (0 ~ 225 MPH) Distance : 0 ~ 999 m (0~3,280 feet) Rotating speed : 0 ~ The setting value of the rotating speed's display scope Time : 0 ~9 : 59'99
●Max. speed record	Display range : 0 ~ 360 km/h (0 ~ 225 MPH)	●Bluetooth connection status	Display range : Steady(connected), OFF(Unconnected) iOS operating system : iOS 5.0 and above Android operating system : Android 9, Android 10
●Gear Meter	Display range : -, N, 1 ~ 6	●Phone battery	Display range : 3 bars
○Max. gear record	Display range : -, N, 1 ~ 6	●Incoming phone call notice	Display range : Display name or number for up to 12 Chinese letters; "... " is displayed for more than 12 letters; "Unknown" is displayed when there is no name iOS - Display either name or number of the incoming call Android - Display number
●Tachometer	Display range : [MT-07] : 0 ~ 12,000 RPM [MT-09] : 0 ~ 13,000 RPM [XSR700] : 0 ~ 12,000 RPM [XSR900] : 0 ~ 13,000 RPM	●Incoming online call notice	Display range : Display name for up to 12 Chinese letters; "... " is displayed for more than 12 letters; "Unknown" is displayed when there is no name support LINE, WeChat, WhatsApp Support iOS, not Android.
○Shift light warning	Display range : Steady, Flash and BAR flashing warning Setting range : [MT-07] : 1,000 ~ 12,000 RPM [MT-09] : 1,000 ~ 13,000 RPM [XSR700] : 1,000 ~ 12,000 RPM [XSR900] : 1,000 ~ 13,000 RPM Setting unit : 1,000 RPM (Big grid) , 500 RPM (Small grid)	●Music playing message	Music name : 15 Chinese letters, and "... " is displayed for more than 15 letters Singer name : 18 Chinese letters, and "... " is displayed for more than 18 letters Total length of the music : 00:00 ~ 9:59:59 , and "9:59:59" is displayed for more 9:59:59 Support iOS, not Android. Current playing time : 00:00 ~ 9:59:59 , and "9:59:59" is displayed for more 9:59:59 Support iOS, not Android.
○Max. rotating speed	Display range : [MT-07] : 0 ~ 12,000 RPM [MT-09] : 0 ~ 13,000 RPM [XSR700] : 0 ~ 12,000 RPM [XSR900] : 0 ~ 13,000 RPM	●Information push	Display range : Name - 4 Chinese letters, and "... " is displayed for more than 4 letters Content -17 Chinese letters, and "... " is displayed for more than 17 letters Support iOS, not Android.
●Air temperature	Display range : -10 ~ 100 °C (14 ~ 212 °F) Display unit : 1 °C (°F) Warning range : LO means below -10 °C (14 °F); HI means higher than 100 °C (212 °F); the numerals would turn into red color and blink as a warning.	●Driving mode	Display range : STD 、 A 、 B
○Coolant temperature	Display range : 0 ~ 250 °C (32 ~ 482 °F) Display unit : 1 °C (°F)	●TCS display	Display range : 1, 2, OFF
○Max. coolant temperature record	Display range : 0 ~ 250 °C (32 ~ 482 °F)	●ECO Indicator	Display range : display, No display
○Coolant temperature warning	Display range : LO means below 39 °C (102 °F); HI means higher than 117 °C (234 °F); the numerals would turn into red color and blink as a warning. Switch unit: May switch to Celsius (°C) or Fahrenheit (°F)	●Back light color	Setting range : blue, green, orange, white
●Fuel meter	Display range : 6 levels Display unit : 1 level(16.6 %)	●Unit	Speed unit : km/h , MPH Temperature unit : °C (Celsius) and °F (Fahrenheit) Fuel consumption unit : km/L, L/100km, MPG(US), MPG(UK)
○Fuel warning setting	Display range : The warning value for low fuel shall be 1 grid and below, the warning signal would blink as a warning.	●Voltage	DC 12 V
○Current fuel consumption	Display range : 0 ~ 40.0 km/L, 2.5 ~ 99.9 L/100km, 0 ~ 99.9 MPG(US), 0 ~ 99.9 MPG(UK) Display unit : 0.1 km/L, 0.1 L/100km, 0.1 MPG(US), 0.1 MPG(UK)	●Operating temperature	-20~ 85 °C
○Average fuel consumption	Display range : 0 ~ 40.0 km/L, 2.5 ~ 99.9 L/100km, 0 ~ 99.9 MPG(US), 0 ~ 99.9 MPG(UK) Display unit : 0.1 km/L, 0.1 L/100km, 0.1 MPG(US), 0.1 MPG(UK)	○Storage temperature	-30~ 90 °C
●Clock	Setting range : 00:00 ~ 23:59 (24H), 1:00 ~ 12:59 (12H)	●Specification	JIS D 0203 (S2)
○Time Trip	Display range : 0 ~ 999.9hr Display unit : 0.1 hr	●Meter Size	170 x 86.2 x 42.5 mm
○Time 1 、 2 (cumulative time)	Display range : 0 ~ 999.9hr Display unit : 0.1 hr	●Meter Weight	Around 244.0 g
		●Indicator	ABS light (Amber) Left indication light(Green) Engine light (Amber) QS Quick switch signal (Green) TCS Tracking control signal (Amber) Neutral light (Green) Coolant temperature warning light(Red) RPM shift light (Red) IMMO anti-theft light(Red) Low fuel warning light (Amber) High beam light (Blue) Right indication light(Green) Motor oil light (Red)

NOTE Design and specifications are subject to change without notice!

3-5 Vehicle Series Function Comparison Table


Model	Original meter part No.	Indicator function			Default value				
		TCS	ABS	QS	Speed unit	Temperature unit	Fuel consumption unit	Shift light warning (Steady)	Shift light warning (Flash)
MT07	1WS-83500-00	X	X	X	km/h	°C	km/L	8000	10000
	1WS-83500-10	X	X	X	mph	°F	MPG(UK)	8000	10000
	2RC-83500-00	X	X	X	mph	°F	MPG(US)	8000	10000
	2RC-83500-10	X	X	X	km/h	°C	km/L	8000	10000
	2RC-83500-20	X	V	X	mph	°F	MPG(US)	8000	10000
	2RC-83500-30	X	V	X	km/h	°C	km/L	8000	10000
	1XB-83500-00	X	V	X	km/h	°C	km/L	8000	10000
	1XB-83500-10	X	V	X	mph	°F	MPG(UK)	8000	10000
	BC6-83500-00	X	V	X	km/h	°C	km/L	8000	10000
	BC6-83500-10	X	V	X	mph	°F	MPG(UK)	8000	10000
MT09	1RC-83500-00	X	X	X	km/h	°C	km/L	9250	11250
	1RC-83500-10	X	X	X	mph	°F	MPG(UK)	9250	11250
	1RC-83500-20	X	X	X	mph	°F	MPG(US)	9250	11250
	1RC-83500-30	X	V	X	km/h	°C	km/L	9250	11250
	1RC-83500-40	X	V	X	mph	°F	MPG(UK)	9250	11250
	1RC-83500-50	X	X	X	km/h	°C	km/L	9250	11250
	2DR-83500-00	V	V	X	km/h	°C	km/L	9250	11250
	2DR-83500-10	V	V	X	mph	°F	MPG(UK)	9250	11250
	BS2-83500-00	V	V	V	km/h	°C	km/L	9250	11250
	BS2-83500-10	V	V	V	mph	°F	MPG(UK)	9250	11250
	BS2-83500-20	V	V	V	mph	°F	MPG(US)	9250	11250
	BS2-83500-30	V	V	V	km/h	°C	km/L	9250	11250
XSR700	B2G-83500-00	X	V	X	mph	°F	MPG(US)	8000	10000
	B2G-83500-10	X	V	X	km/h	°C	km/L	8000	10000
	B2G-83500-20	X	V	X	km/h	°C	km/L	8000	10000
	B2G-83500-30	X	V	X	mph	°F	MPG(UK)	8000	10000
	B34-83500-00	X	V	X	km/h	°C	km/L	8000	10000
	B34-83500-10	X	V	X	mph	°F	MPG(UK)	8000	10000
XSR900	B90-83500-00	V	V	X	km/h	°C	km/L	9250	11250
	B90-83500-10	V	V	X	mph	°F	MPG(UK)	9250	11250
	B90-83500-20	V	V	X	mph	°F	MPG(US)	9250	11250
	B90-83500-30	V	V	X	km/h	°C	km/L	9250	11250
	B90-83500-40	V	V	X	km/h	°C	km/L	9250	11250
	B90-83500-50	V	V	X	mph	°F	MPG(UK)	9250	11250
	B90-83500-60	V	V	X	mph	°F	MPG(US)	9250	11250
	B90-83500-70	V	V	X	km/h	°C	km/L	9250	11250

4-1 Boot screen for Initial Use

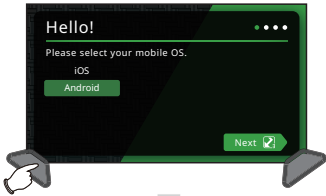


- Boot screen for Initial Use, press the **Adjust or Select** button to choose mobile operating system.

NOTE Pressing of the left button is used for explanation in the graphics.

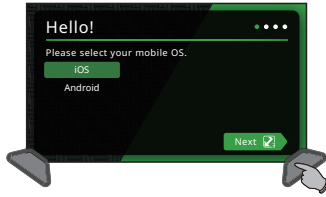


- EX : Select iOS for mobile phone operating system.
- Press the **Adjust button for 3 seconds**, enter the Bluetooth pairing screen.

NOTE iOS operating system:
iOS 5.0 and above
Android operating system:
Android 9, 10

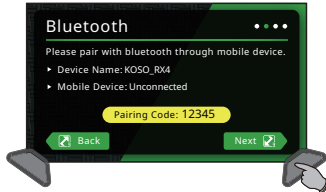


- EX : Bluetooth pairing screen completed.
- Press the **Adjust button for 3 seconds**, enter the vehicle type screen.

NOTE iOS operating system:
Need to enter the pairing code.
Android operating system:
No pairing code is required.
Enter vehicle type selection directly.

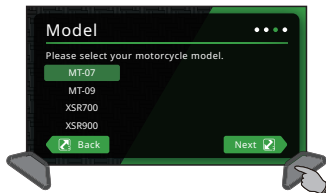


- EX : Select MT-07 for the vehicle type.
- Press the **Adjust button for 3 seconds**, enter the Corresponding No. of the Vehicle.


NOTE Please refer to 3-1 Corresponding No. of the Vehicle.

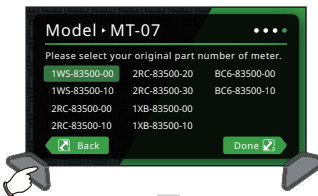

- Example : To set Corresponding No. of the Vehicle to 2RC-83500-30.
- Press the **Adjust or Select** button to choose the setting number.

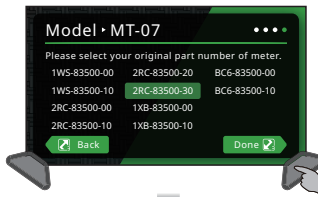

- EX : Set Corresponding No. of the Vehicle from 1WS-83500-00 to 2RC-83500-30.
- Press the **Adjust button for 3 seconds**, enter the Vehicle condition screen.

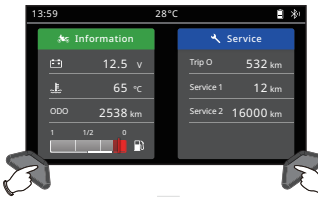


- Vehicle condition screen.
- Press the **Adjust + Select** buttons, to enter the main screen.




- The main screen.

4-2 Switching Instruction for Vehicle Condition Screen

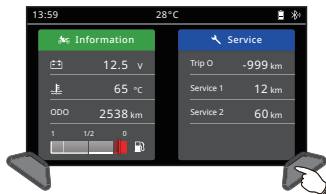


- In the Vehicle condition screen, press the **Adjust button**, to enter the Trip O screen(Flash).

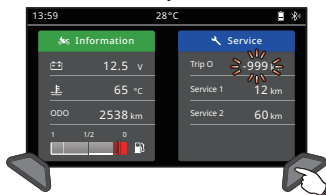


- In the Trip O screen(Flash), press the **Adjust button** to enter the Maintenance mileage 1 screen(Flash).
- Press the **Adjust button for 3 seconds** to reset Trip O screen.

Trip O -999 km → Trip O 500 km

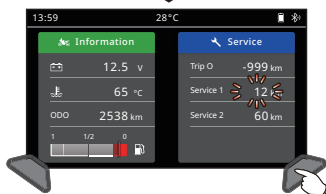

- In the Maintenance mileage 1 screen (Flash), press the **Adjust button** to enter the Maintenance mileage 2 screen(Flash).
- Press the **Adjust button for 3 seconds** to reset Maintenance mileage 1 screen (Flash).


Service 1 12 km → Service 1 500 km

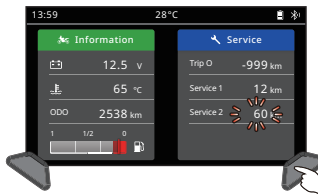

- In the Maintenance mileage 2 screen (Flash), press the **Adjust button** to enter the Vehicle condition screen.

- Press the **Adjust button for 3 seconds** to reset Maintenance mileage 2 screen (Flash).

Service 1 12 km → Service 1 500 km

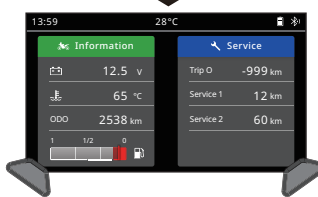

- The Vehicle condition screen.

4-3 Main Menu Switching Description(Adjust button)

• In the Trip 1 screen, press the **Adjust** button to enter the Trip 2 screen.

• Press the **Adjust** button for 3 seconds to reset Trip 1 record.

Trip 1 1688.9 km → Trip 1 0 km

• In the Trip 2 screen, press the **Adjust** button to enter the Current fuel consumption screen.

• Press the **Adjust** button for 3 seconds to reset Trip 2 record.

Trip 2 3055.5 km → Trip 2 0 km

• In the Current fuel consumption screen, press the **Adjust** button to enter the Average fuel consumption screen.

• In the Average fuel consumption screen, press the **Adjust** button to enter the Low fuel mileage screen.

• Press the **Adjust** button for 3 seconds to reset Average fuel consumption record.

AVE CONS 45.5 km → AVE CONS 0 km

• In the Low fuel mileage screen, press the **Adjust** button to enter the Max. record screen.

• Press the **Adjust** button for 3 seconds to reset Low fuel mileage record.

36 km → 0 km

NOTE A low fuel distance table is displayed when reaching the warning value for the original fuel gauge.

NOTE Automatically return to zero without display when filling up the tank and riding for 5km (3mile) or return to zero without display manually.

• In the Max. record screen, press the **Adjust** button to go back to the Trip 1 screen.

• Press the **Adjust** button for 3 seconds to reset Low fuel mileage record.

120 km/h → 0 km/h

• In the Trip 1 screen.

4-4 Main Menu Switching Description(Select button)

• In the Time Trip screen, press the **Select** button to enter the Time 1 screen.

NOTE After flameout by using the key, the time of journey would automatically return to zero.

• In the Time 1 screen, press the **Select** button to enter the Time 2 screen.

• Press the **Select** button for 3 seconds to reset Time 1 record.

Time 1 15.1 hr → Time 1 0 hr


• In the Time 2 screen, press the **Select** button to go back to the Time Trip screen.

• Press the **Select** button for 3 seconds to reset Time 2 record.

Time 2 18.3 hr → Time 2 0 hr

• In the Time Trip screen.

4-5 Record Screen Switching Description(Target Speed, Target Distance, Top Speed)

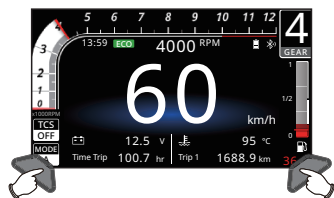

- In the main screen, press the **Select + Adjust** buttons to enter the target speed record screen.




- In the target speed record screen, press the **Select** button to enter the target distance record screen.



- In the target distance record screen, press the **Select** button to enter the top speed record screen.



- In the top speed record screen, press the **Select + Adjust** buttons to go back to the main screen.

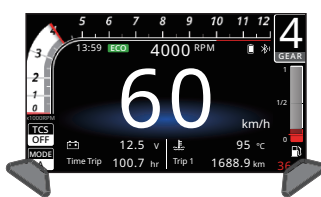

- In the main screen.

- Regardless of the record screen, press the **Select** button for 3 seconds to enter the Power Test fast setting.




4-5-1 Description Of Target Speed Test




- In the target speed record screen, press the **Adjust** button to enter the testing screen.

NOTE Start the test when the bike is fully stopped.

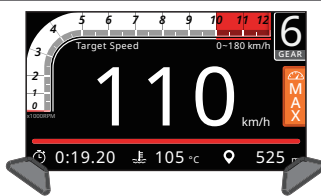


- When you reach the target speed that you set (0~110 km/h), the timer will stop (19"20 second).

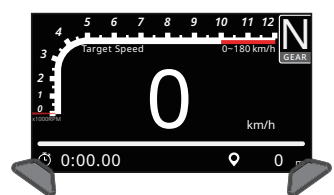


- In the testing screen.

WARNING! Use this function on racetracks to avoid accidents.

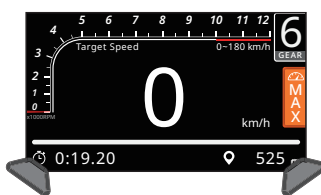

- When speed decreases to 0 km/h (MPH), the target speed record screen will appear.

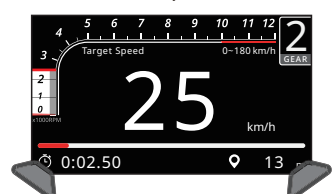


- When the bike moves, the timer will start automatically.

NOTE The timer is automatic, so when your bike starts to move the timer will start to calculate the time and stop automatically when you stop the bike.




- In the target speed record screen.

- Press the **Adjust** button for 3 seconds, to reset the target speed record.

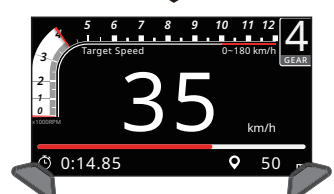

- Speed up.

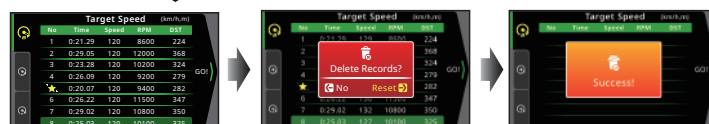

- Press the **Adjust** button to confirm deletion.
- Press the **Select** button to cancel deletion.


- Successfully deleted.
- The alert dialog would disappear after displaying for 3 seconds.

4-5-2 Description Of Target Distance Test



- In the target distance record screen, press the **Adjust** button to enter the testing screen.

NOTE Start the test when the bike is fully stopped.

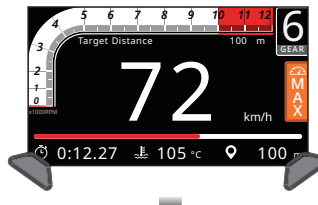


- When you reach the target distance that you set (100 M . 2/32 mile), the timer will stop (12"27 second).



- In the testing screen.

WARNING! Use this function on racetracks to avoid accidents.

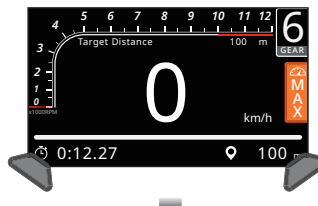

- When speed decreases to 0 km/h (MPH), the target distance record screen will appear.



- When the bike moves, the timer will start automatically.

NOTE The product adopts digital sensing; when the vehicle starts, the timer would immediately start measuring. Upon achieving the target distance, the timer would immediately stop measuring.



- In the target distance record screen.

- Press the **Adjust** button for 3 seconds, to reset the target distance record.



- Speed up.



- Press the **Adjust** button to confirm deletion.
- Press the **Select** button to cancel deletion.

- Successfully deleted.
- The alert dialog would disappear after displaying for 3 seconds.

4-5-3 Description Of Top Speed Test




- In the top speed record screen, press the **Adjust** button to enter the testing screen.

NOTE Start the test when the bike is fully stopped.




- When you reach the top speed (100 km/h), the meter will stop counting the distance (510 m), and time (25"65 seconds).

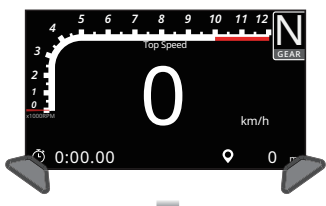


- In the testing screen.

WARNING! Use this function on racetracks to avoid accidents.

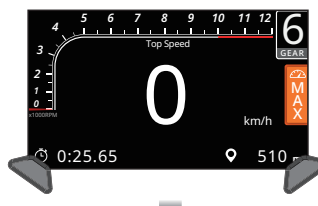

- When speed decreases to 0 km/h (MPH), the top speed record screen will appear.

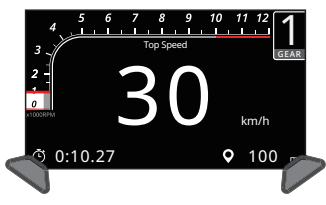


- When the bike moves, the timer will start automatically.

NOTE Display range(Top speed) :
Speed : 0 ~ 360 km/h (0 ~ 225 MPH)
Distance : 0 ~ 999 m (0~3,280 feet)
Rotating speed : 0 ~ 15,000 RPM
Time : 0 ~ 9'59"99


NOTE The product adopts digital sensing; when the vehicle starts, the odometer and the timer would immediately start measuring. Upon achieving the maximum speed, the odometer and the timer would immediately stop measuring.

△ The speed unit of the function would change according to 5-3 Change in Speed Unit.

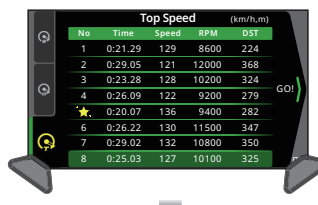


- In the top speed record screen.

- Press the **Select** button for 3 seconds, to reset the top speed record.

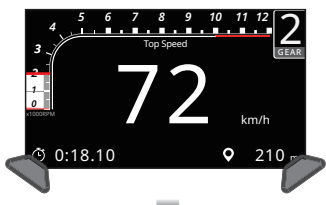

- Speed up.

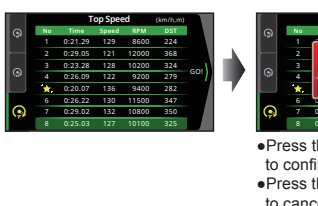

- Press the **Adjust** button to confirm deletion.
- Press the **Select** button to cancel deletion.

- Successfully deleted.
- The alert dialog would disappear after displaying for 3 seconds.

5 Setting Screen Switching Description

- Press the **Select+Adjust** buttons for **3 seconds** on the main screen, record screen, or vehicle condition screen to switch to the setting screen.
- Press the **Select** button or **Adjust** button to select
- ① Model ② Clock ③ Unit(Speed/Temperature/Fuel Consumption) ④ Backlight(Mode/Brightness/Color) ⑤ Speeding warning ⑥ Shift light warning
- ⑦ Voltage warning ⑧ Maintenance mileage ⑨ Power Test ⑩ Internal and External ODO
- ⑪ Meter information ⑫ Bluetooth
- Press the **Adjust** button for **3 seconds** to enter the setting function screen.
- In the setting screen, press the **Select** button for **3 seconds** to switch to the startup screen.

NOTE During setting, if button is not pressed in 3 minutes, it will automatically return to the startup screen.


• Main screen




• Enter the setting screen.




① Model

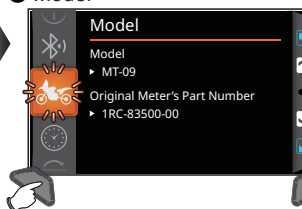

② Clock

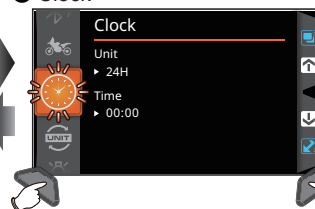

③ Unit(Speed/Temperature/
Fuel Consumption)

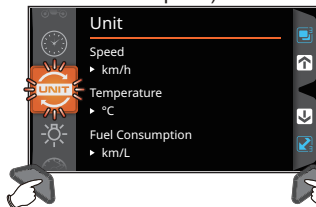


④ Backlight(Mode/Brightness/
Color)




⑤ Speeding warning




⑥ Shift light warning

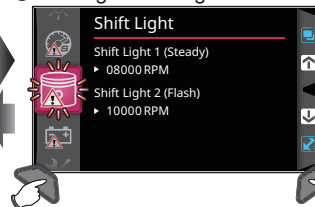


⑦ Voltage warning

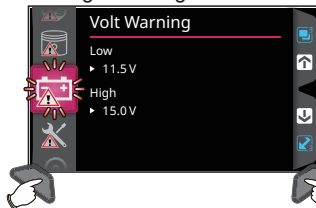

⑧ Maintenance mileage

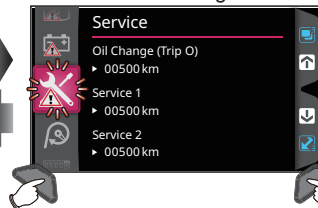


⑨ Power Test

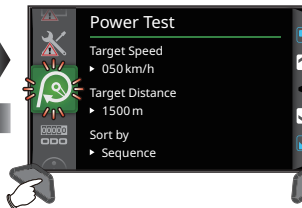


⑩ Internal and External ODO




⑪ Meter information

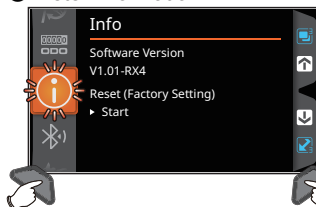

⑫ Bluetooth

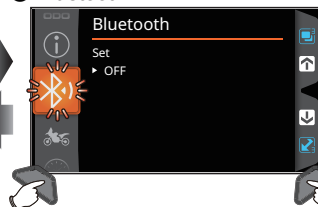


5-1 Model Setting

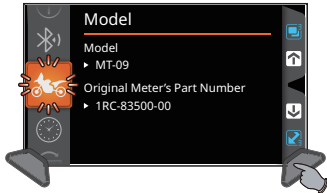


- The Model screen, press the **Adjust** button for 3 seconds to enter the Model setting.




- Example : To set Corresponding No. of the Vehicle to 2RC-83500-30.**
- Press the **Select** button to choose the setting number.

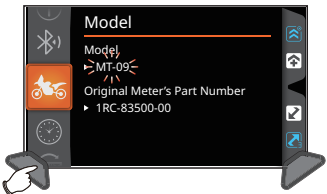

- Example : To set mode to MT-07.**
- Press the **Select** button to choose the setting options.
- Press the **Adjust** button, enter the Corresponding No. screen of the Vehicle.

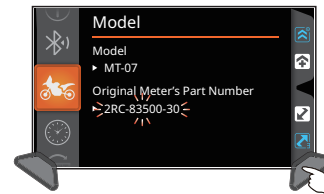


- EX : Set Corresponding No. of the Vehicle from 1WS-83500-00 to 2RC-83500-30 .
- Press the **Adjust** button to go back to the Model screen.

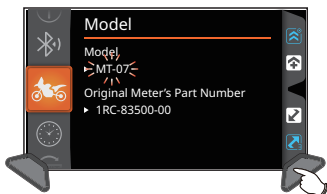


- Press the **Adjust** button, enter the Corresponding No. screen of the Vehicle screen.

NOTE Please refer to 3-1 Corresponding No. of the Vehicle.

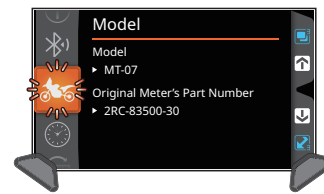


- The Model screen.

5-2 Clock Setting

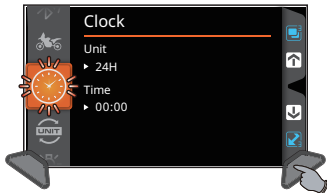


- The Clock screen, press the **Adjust** button for 3 seconds to enter the clock setting.

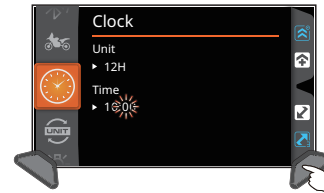

- Example : To set clock(minute) as 10 minutes.**
- Press the **Adjust** button to move to the digit you want to set.

NOTE Now the setting value is flashing!
Setting range : 00~59 minutes.
Default value : 0.

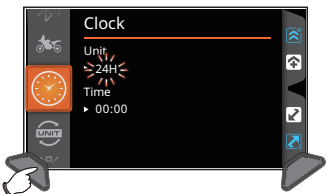


- Example : Changing the 12H.**
- Press the **Select** button to choose the setting number.

NOTE Now the setting value is flashing!

Setting range : 12 H, 24 H.
Default value : 24 H.




- Press the **Select** button to choose the setting number.

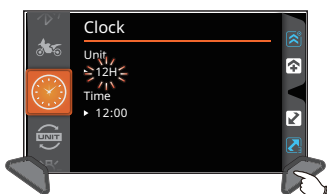

- EX : Set time format from 24 H to 12 H.
- Press the **Adjust** button to enter time adjustment hour setting.



- EX : Set minute from 0 minute to 10 minutes.
- Press the **Adjust** button to go back to the clock screen.

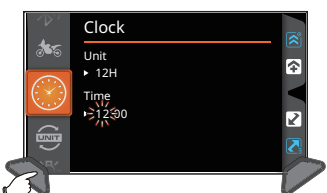


- Example : To set clock(hour) as 10 hours.**
- Press the **Select** button to choose the setting number.

NOTE Now the setting value is flashing!

Cursor moving order is :
Hour → Digit in ten minutes →
Digit in minutes

NOTE Setting range : 1~12(12H)
0 ~23(24H)
Default value : 12(12H)/0(24H)

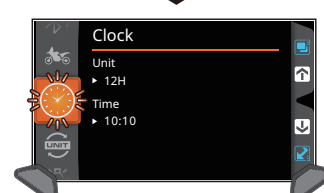


- The Clock screen.




- EX : Set hour from 12:00 AM to 10:00 AM.
- Press the **Adjust** button to enter clock adjustment minute setting.

5-3 Unit (Speed, Temperature, Fuel Consumption) Setting

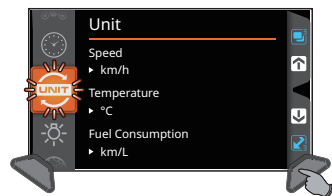


- The unit screen, press the **Adjust** button for 3 seconds to enter the speed unit setting.

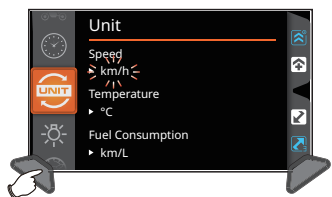


- Example : To set speed unit as MPH.**
- Press the **Select** button to choose the setting options.

⚠ Now the setting value is flashing!

NOTE Setting range : km/h, MPH.
Default value : Subject to the vehicle type of the setting .

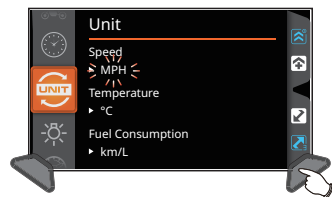


- EX : Set speed unit from km/h to MPH.
- Press the **Adjust** button to enter the temp. unit setting screen.

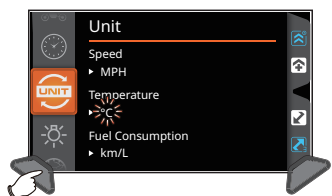


- Example : To set temp. unit to °F.**
- Press the **Select** button to choose the setting options.

⚠ Now the setting value is flashing!

NOTE Setting range : °C (Celsius) and °F (Fahrenheit).
Default value : Subject to the vehicle type of the setting .

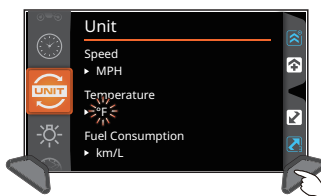


- EX : Set temp. unit from °C (Celsius) to °F (Fahrenheit).
- Press the **Adjust** button to enter the Fuel Consumption unit setting screen.

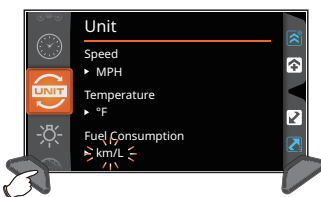


- Example : To set fuel consumption unit as L/100km.**
- Press the **Select** button to choose the setting options.

⚠ Now the setting value is flashing!

NOTE Setting range : km/L, L/100km, MPG(US), MPG(UK).
Default value : Subject to the vehicle type of the setting .

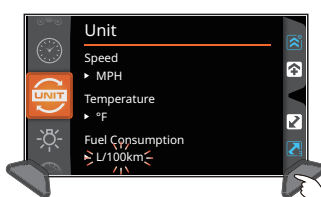

- EX : Set fuel consumption unit from km/L to L/100km.
- Press the **Adjust** button to go back to the unit (speed, temp., fuel consumption) screen.

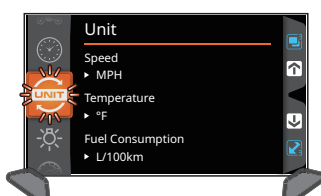

- The unit (speed, temp., fuel consumption) screen.

5-4 Backlight/Mode/Brightness/Color) Setting



- The backlight screen, press the **Adjust** button for 3 seconds to enter the background mode setting.



- Example : To set the mode to Night mode.**
- Press the **Select** button to choose the setting options.

⚠ Now the setting value is flashing!

NOTE Setting Auto(automatically switch according to the light : day mode display for the bright environment and Night mode display for the dark environment), Day mode, Night mode.
Default value : Auto.



- EX : Set background from Auto mode to Night mode.
- Press the **Adjust** button to enter the backlight brightness (day) setting.



- Example : To set the backlight brightness (day) at 4(80%).**
- Press the **Adjust** button to choose the setting number.

⚠ Now the setting value is flashing!

NOTE Setting range : 1~ 5 (Brightest).
Setting unit : 20% per level.
Default value : 5(100%).

NOTE The backlight brightness will change immediately after you set the value.



- EX : The backlight brightness (day) setting is changed from 5 (100%) to 4 (80%).
- Press the **Adjust** button to enter the backlight brightness (night) setting.



- Example : To set the backlight brightness (night) at 2(40%).**
- Press the **Select** button to choose the setting number.


⚠ Now the setting value is flashing!

NOTE Setting range : 1 (Darkest) ~ 5 (Brightest), 5 different levels available.
Setting unit : 20% per level.
Default value : 3(60%).

NOTE The backlight brightness will change immediately after you set the value.



- EX : The backlight brightness (night) setting is changed from 3 (60%) to 2 (40%).
- Press the **Adjust** button to enter the backlight color setting.

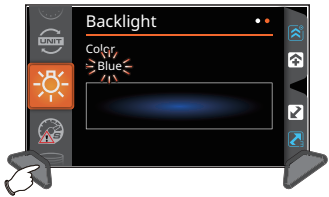


- Example : To set backlight color to white.
- Press the **Select** button to choose the color .

⚠ Now the setting value is flashing!


NOTE Switch color according to the following order,blue, green, orange,white.

NOTE Default value : blue.

NOTE The backlight color will change immediately after you set the value.

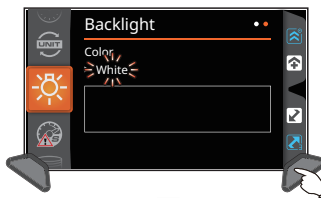


- EX : Set backlight color from blue to white.
- Press the **Adjust** button to go back to the backlight screen.

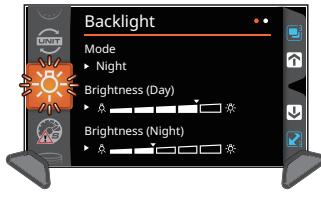


- The backlight screen.

5-5 Speeding warning Setting

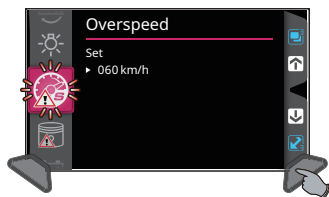


- The Speeding warning screen, press the **Adjust** button for 3 seconds to enter the speeding warning setting.

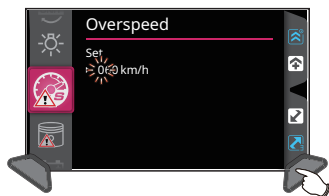


- Example : To set speeding warning value to 80 KPH.
- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : 30~360 km/h (20~225 MPH).
Default value : 60 km/h (38 MPH).

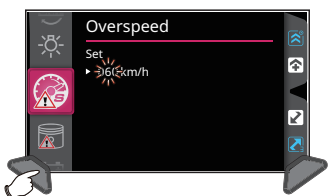

- Press the **Select** button to choose the setting number.

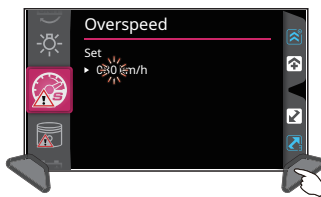


- EX : Set speed warning value from 60 KPH to 80 KPH.
- Press the **Adjust** button to go back to the speed warning screen.

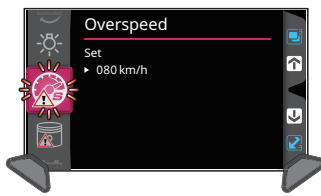


- The speed warning screen.

5-6 Shift light warning Setting

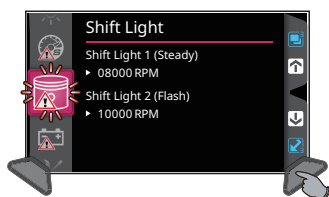

- The shift light warning screen, press the **Adjust** button for 3 seconds to enter the shift light warning(Steady) setting.

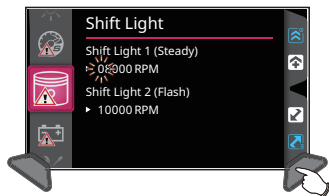


- Example : To set shift light warning (Steady) value to 12,000 RPM.
- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range :
[MT-07] : 1,000 ~ 12,000 RPM
[MT-09] : 1,000 ~ 13,000 RPM
[XSR700] : 1,000 ~ 12,000 RPM
[XSR900] : 1,000 ~ 13,000 RPM
Default value : Subject to the vehicle type of the setting .



- Press the **Select** button to choose the setting number.

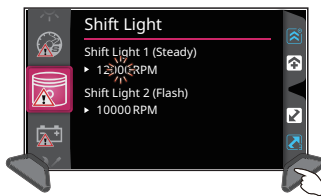

- EX : Set shift light warning(Steady) value from 8,000 RPM to 12,000 RPM.
- Press the **Adjust** button to enter the shift light warning(Fast Flash) setting.

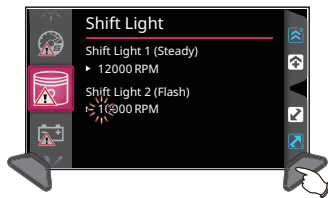


- **Example** : To set shift light warning (Flash) value to 11,000 RPM.
- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range :
 [MT-07] : 1,000 ~ 12,000 RPM
 [MT-09] : 1,000 ~ 13,000 RPM
 [XSR700] : 1,000 ~ 12,000 RPM
 [XSR900] : 1,000 ~ 13,000 RPM
 Default value : Subject to the vehicle type of the setting .



- Press the **Select** button to choose the setting number.

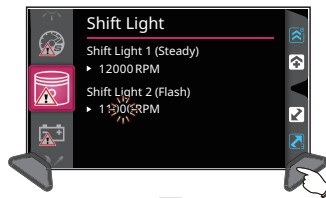


- **EX** : Set shift light warning(Flash) value from 10,000 RPM to 11,000 RPM.
- Press the **Adjust** button to go back to the shift light warning screen.

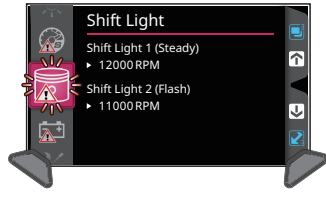


- The shift light warning screen.

5-7 Voltage warning Setting

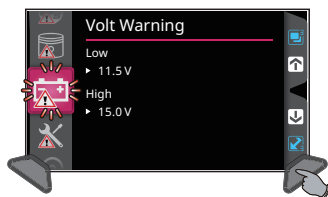


- The voltage warning screen, press the **Adjust** button for 3 seconds to enter the low voltage warning setting.

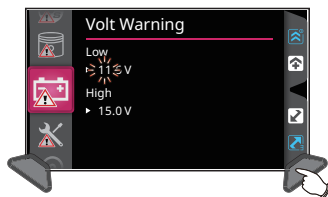


- **Example** : To set low voltage warning value to DC 11.0 V.
- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : DC 8.0~13.0 V.
 Default value : DC 11.5 V.

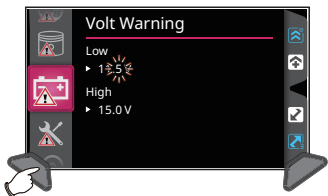

- Press the **Select** button to choose the setting number.

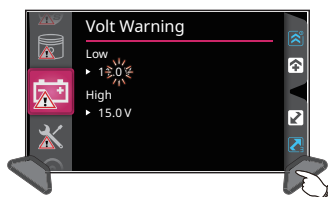


- **EX** : Set low voltage warning value from DC 11.5 V to DC 11.0 V.
- Press the **Adjust** button to enter the high voltage warning setting.

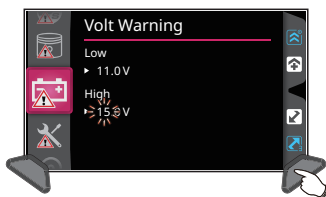


- **Example** : To set high voltage warning value to DC 16.0 V.
- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : DC 13.1~18.0 V.
 Default value : DC 15.0 V.

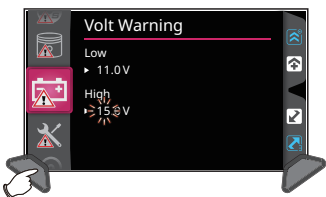

- Press the **Select** button to choose the setting number.

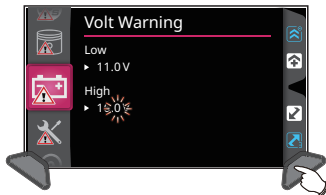


- **EX** : Set high voltage warning value from DC 15.0 V to DC 16.0 V.
- Press the **Adjust** button to go back to the voltage warning screen.

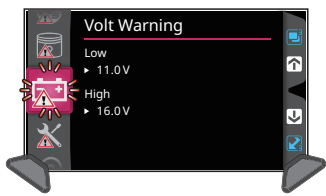


- The voltage warning screen.

5-8 Maintenance mileage Setting

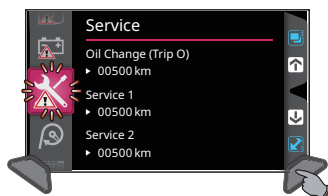


- The maintenance mileage screen, press the **Adjust** button for 3 seconds to enter the motor oil maintenance setting.

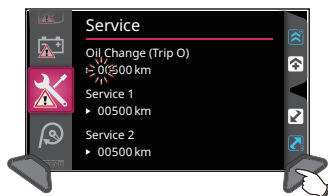


- **Example** : To set motor oil maintenance as 12,000 km.
- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : 500 ~ 16,000 km
 (300~10,000 mile).
 Default value : 500 km(300 mile).

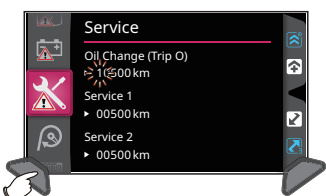

- Press the **Select** button to choose the setting number.

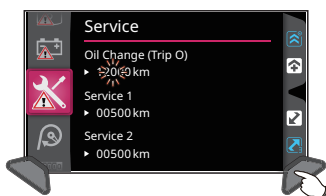


- **EX** : The motor oil maintenance setting is changed from 500 km to 12,000 km.
- Press the **Adjust** button to enter the maintenance mileage 1 setting.

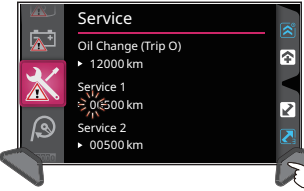


- Example : To set maintenance mileage 1 as 10,000 km.
- Press the **Adjust button** to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : 500 ~ 16,000 km (300~10,000 mile).
Default value : 500 km(300 mile).

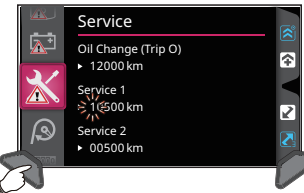

- Press the **Select button** to choose the setting number.

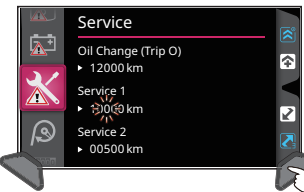


- EX : The maintenance mileage 1 setting is changed from 500 km to 10,000 km.
- Press the **Adjust button** to enter the maintenance mileage 2 setting.

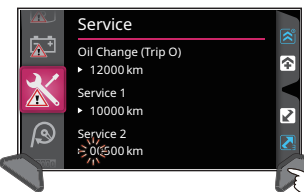


- Example : To set maintenance mileage 2 as 8,000 km.
- Press the **Adjust button** to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : 500 ~ 16,000 km (300~10,000 mile).
Default value : 500 km(300 mile).

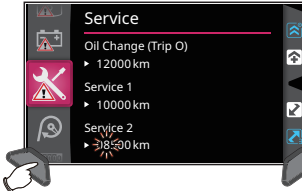

- Press the **Select button** to choose the setting number.

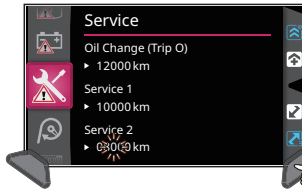


- EX : The maintenance mileage 2 setting is changed from 500 km to 8,000 km.
- Press the **Adjust button** to go back to the maintenance mileage screen.

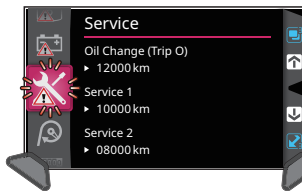


- The maintenance mileage screen.

5-9 Power Test Setting

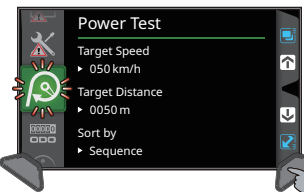


- The Power Test screen, press the **Adjust button for 3 seconds** to enter the Power Test setting.

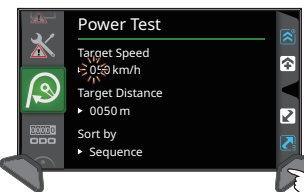


- Example : To set target speed value to 110 km/h.
- Press the **Adjust button** to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : 30~360 km/h (20~225 MPH).
Default value : 50 km/h (30 MPH).

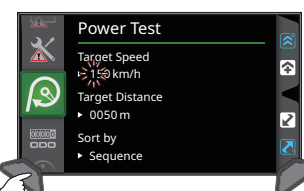

- Press the **Select button** to choose the setting number.

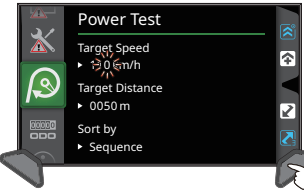


- EX : Set target speed value from 50 km/h to 110km/h.
- Press the **Adjust button** to enter the target distance setting.

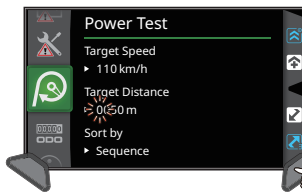


- Example : To set target distance value to 100 m.
- Press the **Adjust button** to move to the digit you want to set.

⚠ Now the setting value is flashing!


NOTE Setting range : 50~1,500 m (1/32~30/32 mile).
Default value : 50 m (1/32 mile).

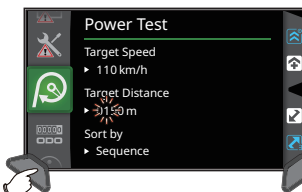

- Press the **Select button** to choose the setting number.

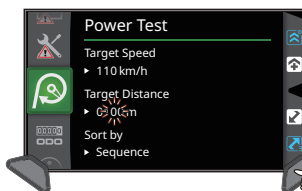


- EX : Set target distance value from 50 m to 100 m.
- Press the **Adjust button** to enter the record order setting.

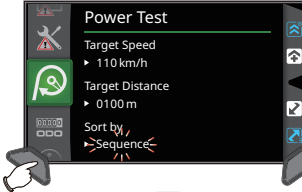


- Example : To set record order to Best.
- Press the **Select button** to choose the setting options.

⚠ Now the setting value is flashing!

NOTE Setting range : Sequence, Best.
Default value : Sequence.

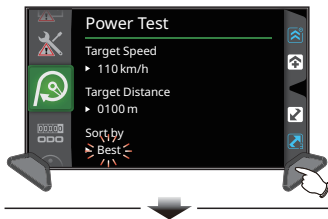


- EX : Set record order from Sequence to Best.
- Press the **Adjust** button to go back to the Power Test screen.

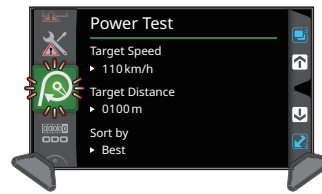

- The Power Test screen.


5-10 Internal and External ODO Setting

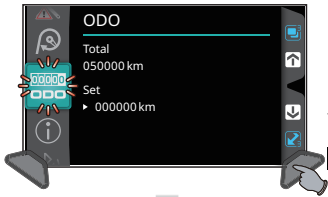


- The internal and external ODO screen, press the **Adjust** button for 3 seconds to enter the external ODO setting.

⚠ User unable to adjust or clear internal ODO.

NOTE Display range : 0~999,999 km (mile).

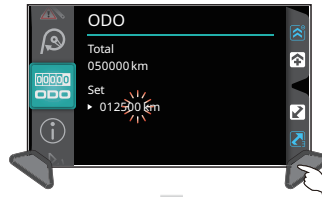

- EX : Set external total distance value from 000,000 km to 12,500 km.
- Press the **Adjust** button to go back to the internal and external ODO screen.

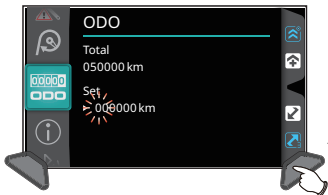


- Example : To set external total distance value to 12,500 km.

- Press the **Adjust** button to move to the digit you want to set.

⚠ Now the setting value is flashing!

Cursor's order : one hundred thousand→thousands→thousand→hundred→ten→digit.

NOTE Setting range : 0 ~ 999,999 km (mile).

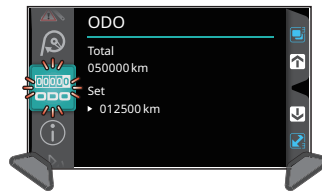


- The internal and external ODO screen.




- Press the **Select** button to choose the setting number.


5-11 Meter information Setting

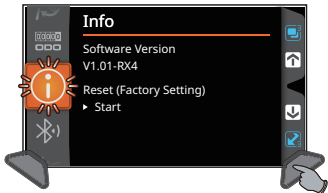

- The meter information screen, press the **Adjust** button for 3 seconds to enter the meter information setting.

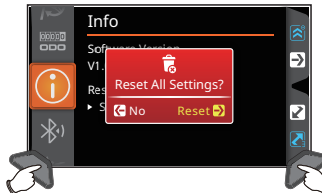


- Press the **Adjust** button to confirm reset.
- Press the **Select** button to cancel reset.

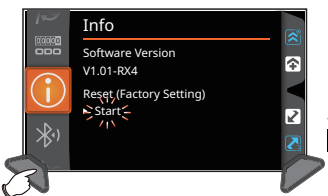

- Example : To reset the meter(original setting).
- Press the **Select** button to reset.

⚠ Now the setting value is flashing!

NOTE User unable to adjust or clear software Version.

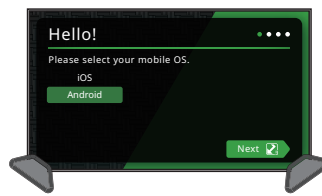


- Successfully reset and return to the boot screen for initial use.

5-12 Bluetooth Setting



- The Bluetooth screen, press the **Adjust button for 3 seconds** to enter the Bluetooth setting.

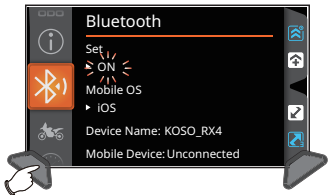

- Example : Select "ON" or "OFF" for the Bluetooth setting.**
- Press the **Select button** to choose the setting options.
- If OFF is selected, then press the **Adjust button** to exit the Bluetooth setting.
- If ON is selected, then press the **Adjust button** to enter the mobile operating system settings.

⚠ Now the setting value is flashing!

NOTE Setting range : ON, OFF.
Default value : ON.



- Example : To set mobile operating system to iOS.**
- Press the **Select button** to choose the setting options.

⚠ Now the setting value is flashing!


NOTE Setting range : iOS, Android.
Supported version: iOS 5.0 and above, Android 9, Android 10.
Default value : iOS.




- Turn on the Bluetooth function of the mobile phone.
- Press device "KOSO RX4."



- Please enter the code displayed on "KOSO RX4."

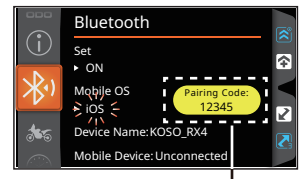

- Device successfully connected.

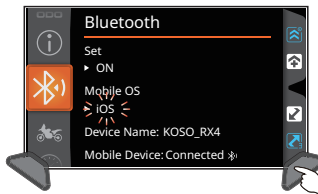


- EX : Bluetooth successfully connected.
- Press the **Adjust button** to go back to the Bluetooth screen.



- The Bluetooth screen.

NOTE After the Bluetooth is successfully connected, the main screen may display the battery, incoming phone call notice, incoming online call notice, music playing message, information push of the mobile phone.

Phone battery

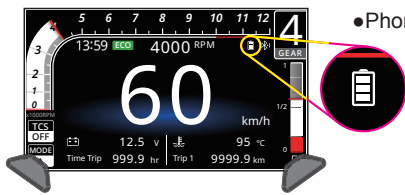

- Phone battery.

NOTE Display range : 3 bars.

Information push



- Information push screen.

NOTE Display range :
Name - 4 Chinese letters, and "... " is displayed for more than 4 letters.
Content -17 Chinese letters, and "... " is displayed for more than 17 letters.
→ Support iOS, not Android.

Incoming phone call notice/ Incoming online call notice



- Incoming phone call notice screen.
- Incoming online call notice screen.



- Call connected screen.

NOTE ●Incoming phone call notice screen.

Display range : Display name or number for up to 12 Chinese letters; "... " is displayed for more than 12 letters; "Unknown" is displayed when there is no name
iOS - Display either name or number of the incoming call
Android - Display number

●Incoming online call notice screen.

Display range : Display name for up to 12 Chinese letters; "... " is displayed for more than 12 letters; "Unknown" is displayed when there is no name
→ Support LINE, WeChat, WhatsApp
→ Support iOS, not Android.

Music playing message



- Music playing message screen.

NOTE Music name : 15 Chinese letters, and "... " is displayed for more than 15 letters
Singer name : 18 Chinese letters, and "... " is displayed for more than 18 letters
Total length of the music : 00:00 ~ 9:59:59 , and "9:59:59" is displayed for more 9:59:59
→Support iOS, not Android.
Current playing time : 00:00 ~ 9:59:59 , and "9:59:59" is displayed for more 9:59:59
→Support iOS, not Android.

※ "The Company is committed to optimizing the Bluetooth application function of the meter. However, as supports for software and hardware of different mobile phones differ, the Bluetooth application function of the meter may be affected and causing differences in functions. Please contact the distributor or the Company for any materials using issues."

6 Trouble Shooting

The following situations do not necessarily indicate malfunction of the product. Check the following points, before contacting us.

Trouble	Check item	Trouble	Check item
The meter doesn't work when the power is on.	●The power isn't supplied to the meter. →Please make sure the wiring is connected. The wiring and fuse are not broken. →The battery is too old to supply needed power (DC 12 V).	Fuel meter doesn't display or display error.	●Check your fuel tank. ●May be due to poor connection of wiring. →Please check whether the wires are disconnected or have fallen off. ●May be wrong settings. →Please check the 3-1 Corresponding No. of the Vehicle.
The meter shows wrong information.	●Check the voltage of your battery, and make sure the voltage is over DC 12 V.	The clock is incorrect.	●May be due to the reversed power line. →Please check the positive wire(Red) connects to the battery(DC 12 V), and main switch positive wiring(Brown) connects to the main switch(DC 12 V). ●May be wrong setting. →Please check the setting list to see whether the setting for clock is correct.
Speed meter doesn't appear or appears incorrectly.	●May be due to poor connection of wiring. →Please check whether the wires are disconnected or have fallen off. ●May be wrong settings. →Please check the 3-1 Corresponding No. of the Vehicle.	Voltage doesn't appear or appears incorrectly.	●May be due to poor connection of wiring. →Please check whether the wires are disconnected or have fallen off. ●May be due to poor connection of wiring. →Please check whether the wires are disconnected or have fallen off.
Tachometer doesn't appear or appears incorrectly.	●May be due to poor connection of wiring. →Please check whether the wires are disconnected or have fallen off. ●May be wrong settings. →Please check the 3-1 Corresponding No. of the Vehicle.		
Thermometer doesn't appear or appear incorrectly.	●May be wrong settings. →Please check the 3-1 Corresponding No. of the Vehicle.		

※ If the problems still can't be solved, please contact our technical department for assistance.