

Custom Dynamics® Turn Signal Decoder™ Installation Instructions

We thank you for purchasing the Custom Dynamics® Turn Signal Decoder™ ! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics at 1(800)382-1388.

Our Turn Signal Decoder breaks out the left and right turn signal wires, with easy to connect to Posi-Taps, making it possible to add rear Amber or Red Turn Signal functions such as our Dual Color Plasma Rods, LED Plate Frames with Amber Turns. Works only with add-on LED Turn Signals.

Instructions

1. Remove the seat to find the rear fender harness connector.
2. Unplug connector and plug in the decoder, male to female and female to male.
3. Using the provided Posi-Lock™ connectors (see reverse side), attach positive side of the turn signals to the Purple/Brown wires:
Purple = Left Turn
Brown = Right Turn
4. Connect the negative from LED's to suitable ground.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Custom Dynamics® Turn Signal Decoder Installation Instructions

We thank you for purchasing the Custom Dynamics® Turn Signal Decoder™ ! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics at 1(800)382-1388.

Our Turn Signal Decoder breaks out the left and right turn signal wires, with easy to connect to Posi-Taps, making it possible to add rear Amber or Red Turn Signal functions such as our Dual Color Plasma Rods, LED Plate Frames with Amber Turns. Works only with add-on LED Turn Signals.

Instructions

1. Remove the seat to find the rear fender harness connector.
2. Unplug connector and plug in the decoder, male to female and female to male.
3. Using the provided Posi-Lock™ connectors (see reverse side), attach positive side of the turn signals to the Purple/Brown wires:
Purple = Left Turn
Brown = Right Turn
4. Connect the negative from LED's to suitable ground.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Custom Dynamics® Turn Signal Decoder Installation Instructions

We thank you for purchasing the Custom Dynamics® Turn Signal Decoder™ ! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics at 1(800)382-1388.

Our Turn Signal Decoder breaks out the left and right turn signal wires, with easy to connect to Posi-Taps, making it possible to add rear Amber or Red Turn Signal functions such as our Dual Color Plasma Rods, LED Plate Frames with Amber Turns. Works only with add-on LED Turn Signals.

Instructions

1. Remove the seat to find the rear fender harness connector.
2. Unplug connector and plug in the decoder, male to female and female to male.
3. Using the provided Posi-Lock™ connectors (see reverse side), attach positive side of the turn signals to the Purple/Brown wires:
Purple = Left Turn
Brown = Right Turn
4. Connect the negative from LED's to suitable ground.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Custom Dynamics® Turn Signal Decoder Installation Instructions

We thank you for purchasing the Custom Dynamics® Turn Signal Decoder™ ! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics at 1(800)382-1388.

Our Turn Signal Decoder breaks out the left and right turn signal wires, with easy to connect to Posi-Taps, making it possible to add rear Amber or Red Turn Signal functions such as our Dual Color Plasma Rods, LED Plate Frames with Amber Turns. Works only with add-on LED Turn Signals.


Instructions

1. Remove the seat to find the rear fender harness connector.
2. Unplug connector and plug in the decoder, male to female and female to male.
3. Using the provided Posi-Lock™ connectors (see reverse side), attach positive side of the turn signals to the Purple/Brown wires:
Purple = Left Turn
Brown = Right Turn
4. Connect the negative from LED's to suitable ground.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2


Fits 2014 HD Street Glide, Street Glide Special, Electra Glide Ultra Classic & Ultra Limited Models.

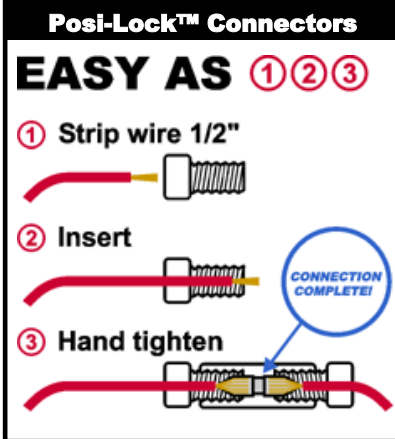

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2


Fits 2014 HD Street Glide, Street Glide Special, Electra Glide Ultra Classic & Ultra Limited Models.

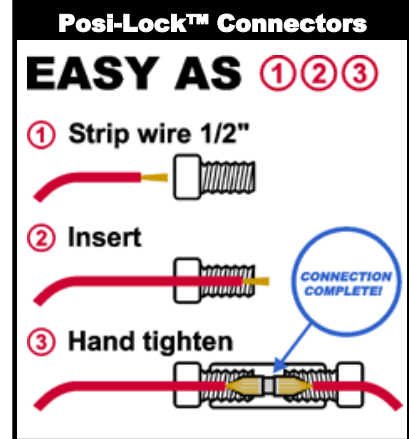

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2


Fits 2014 HD Street Glide, Street Glide Special, Electra Glide Ultra Classic & Ultra Limited Models.

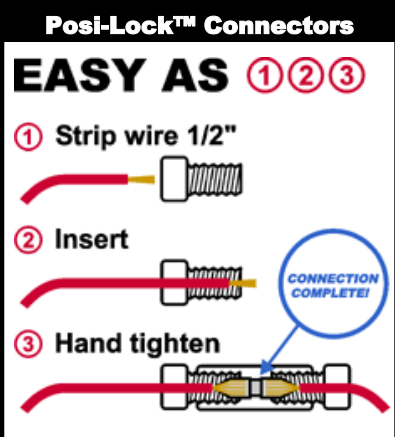

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Fits 2014 HD Street Glide, Street Glide Special, Electra Glide Ultra Classic & Ultra Limited Models.

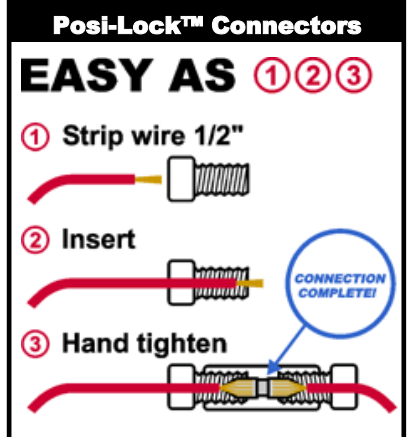

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST